148x210mm

SWGZ212B-2

MANUAL

Preliminary Steps

1.Read all instructions carefully and study diagrams before installing lights.
2.Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3.Disconnect ground connection from battery(marked"-")to avoid accidental short circuits before attempting to connet electrical wires.
4.Route new wires along existing wiring.Tape as necessary to correct slack.
5.When running wires,Keep them away from moving parts.

Mounting Lights

Lock the U-shape bracket to the housing with M8*65 screw, M8 flat washer and M8 self-lock nut.

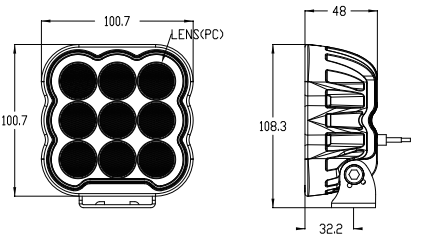

Wiring Instructions

1.Switch Controls:

Work light: red wire connected to positive pole+black wire connected to negative pole.

2.Wire Functions

1) Red wire: Positive pole.
2) Black wire: Negative pole.

Cautions:
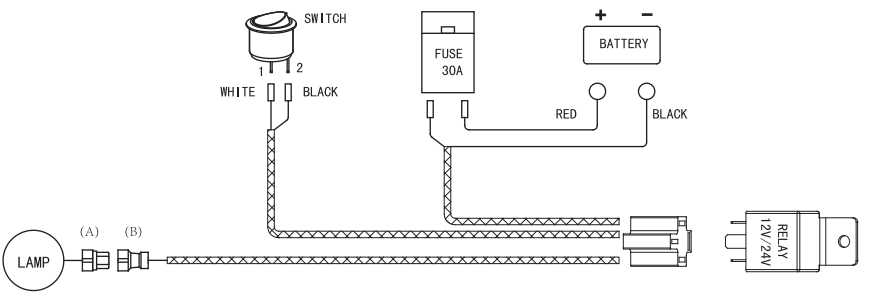
.Working voltage (DC12V-24V), Voltage range (DC9V-36V)
.This light becomes hot during continuous use.Don't remove the lamp or touch the casing for at least 30 minutes after turning the lamp off.
.Keep heat-sink clean and exposed to maintain air flow.